


Instructions for installation of fiberboard for Vitro-graph on a GK1, GK2 and GK3.

The rods will go from left to right on the front leg. Install the rod on back legs, see picture to the right.



Insert the rod on the back legs, then insert the second rod in the front legs.

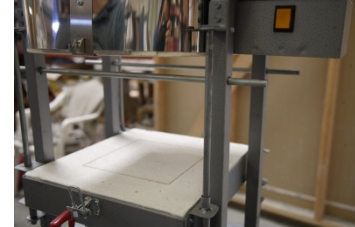

With the two rods in place slide the fiber board between the brick and the rods all the way back, the board may extend a bit past the edges of the kiln. There may be a space between the brick and the board, it is ok.



Place the Vitro-graph rack inside the chamber; be sure to line up the hole of the rack with the hole in the fiber board. When loading the pot with the glass. It is important that the hole of the pot, the rack and the board line up.

